

Music stand Start

Start is a stable, steel music stand with black aluminium plate and zinc plated telescopic arm. Wing tipped screws provide stepless height adjustment and inclination. The plate is easily removed. Holder for lighting pre-installed.

Accessories

Also available are lamp (LED and halogen), supplementary shelf, longer telescopic arm and heavy model. Desk model to be placed directly on table/bench also available.

The folding model is called Swing, on which the support leg folds upwards. Also available is a tour case that holds four of these music stands. For outdoor use there is a plexiglass cover to be placed on top of the sheet music, so that it will stay in place.



Swing, with collapsible support leg



Lamp holder

Facts

Weight:	3 kg (5 kg)
Height:	62 - 105 cm, alt. 82 - 125 cm, from plate's lower edge
Music plate:	53 x 34 cm. Depth of shelf: 4 cm
Width of foot:	45 cm

